


The gasoline related problems can be avoided by following these simple steps. For more information please contact your local **AUTHORIZED HONDA DEALER.**

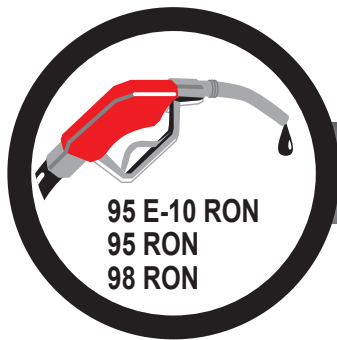


WHAT KIND OF GASOLINE TO USE

- The lead free 98, 95, 95 E-10 can be used for the **HONDA** products. Do not use E-85. This gasoline is for flex-fuel car vehicle only.
- **HONDA** does not foresee any negative effects from the use of Alkylate type gasoline. However, due to the availability of different types of Alkylate gasoline, no recommendation for their use can be provided at this time. Please refer to the instructions and data sheet provided by the Alkylate manufacturer for more information.
- If the **HONDA** product will be used on an intermittent basis (more than 4 weeks between usage) add **HONDA** stabilizer to the fresh fuel just after purchasing.
Note:
 - > The **HONDA** fuel stabilizer has a self life and its performances will deteriorate over time (keep it 2 years max after opening).
 - > The fuel stabilizer will not reconstitute stale fuel.



HOW TO STORE GASOLINE

- Do not store fresh gasoline for more than 3 months if not treated with **HONDA** stabilizer.
- Add **HONDA** gasoline stabilizer into fresh gasoline if storage time will be longer than 3 months.
- Store the gasoline in a clean, approved red and sealed container.
- If gasoline is stored in a steel fuel tank, make sure there is no corrosion at all.
- If it is plastic fuel tank, make sure that the original red color has not pass away.
- Store the gasoline away from the sun light.
- Store the gasoline in a cool place (avoid exposure to high temperature).
- If you have some gasoline left in your storage container at the end of the season, you can bring it to the local "waste reception center".

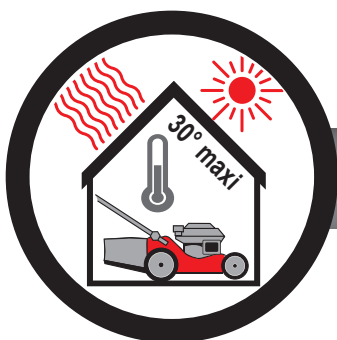

MAINTENANCE OF YOUR HONDA PRODUCT

- **During usage :**
 - > If the **HONDA** product will be used on an intermittent basis (more than 4 weeks between usage) add **HONDA** stabilizer to the fresh fuel just after purchasing.
 - > At the end of the operation time, turn the gasoline valve off and continue to operate the **HONDA** product until it runs out of gasoline (time will depend on usage type).
 - > Keep the engine air cleaner clean.
- **Before winter storage :**
 - > Drain the carburetor and the gasoline tank and refer to your **HONDA** product owner's manual for additional information.
 - > Have an appointment with your **Authorized HONDA Dealer** for "Winter Maintenance Service".
 - > Do not allow gasoline to remain in your engine for more than 3 months of inactivity.

HONDA recommends

